
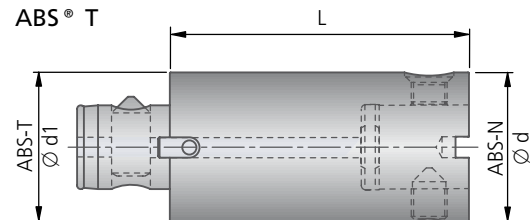


KOMET ABS® N | ABS® T

Verlängerung mit ABS® N / ABS® T Anbindung

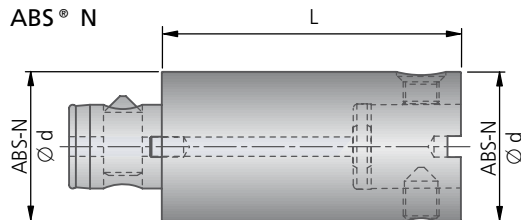

ABS® N V				
Artikel	Bestell-Nr.	ABS-N $\varnothing d$	L	
ABS 40N-V90	A20 05640	40	90	0,84
ABS 40N-V40	A20 05840	40	40	0,36
ABS 50N-V65	A20 05450	50	65	0,94
ABS 50N-V50	A20 05910	50	50	0,71
ABS 63N-V85	A20 05460	63	85	1,97
ABS 63N-V60	A20 05920	63	60	1,37
ABS 80N-V85	A20 05470	80	85	3,15
ABS 80N-V70	A20 05930	80	70	2,58
ABS100N-V160	A20 05680	100	160	9,47
ABS100N-V125	A20 05480	100	125	7,36
ABS100N-V85	A20 05880	100	85	4,95

Lieferumfang:

Verlängerung komplett montiert.

ABS® T V					
Artikel	Bestell-Nr.	ABS-T $\varnothing d_1$	ABS-N $\varnothing d$	L	
ABS 50T-V150	A20 05751	50	50	150	2,22
ABS 50T-V100	A20 05652	50	50	100	1,46
ABS 50T-V65	A20 05950	50	50	65	0,94
ABS 50T-V50	A20 05851	50	50	50	0,71
ABS 63T-V190	A20 05760	63	63	190	4,47
ABS 63T-V125	A20 05661	63	63	125	2,94
ABS 63T-V85	A20 05960	63	63	85	1,97
ABS 63T-V60	A20 05861	63	63	60	1,37
ABS 80T-V240	A20 05770	80	80	240	9,18
ABS 80T-V125	A20 05671	80	80	125	4,71
ABS 80T-V85	A20 05970	80	80	85	3,15
ABS 80T-V70	A20 05871	80	80	70	2,58

Anmerkung:

Zur optimalen Drehmomentmitnahme wird die Verwendung von ABS® T Verlängerungen empfohlen.